

COTES ALL-ROUND

INSTALLATION

Get the most out of your dehumidifier with these practical tips for installing it correctly

COTES




[COTES.COM](https://www.cotes.com)

CORRECT INSTALLATION

These guidelines will help make sure your dehumidifier works in accordance with the agreed specifications.

1. The duct leading the regeneration air away must be angled downwards from the dehumidifier by at least 2 degrees.
2. If the regeneration air flow can't be adjusted in the dehumidifier itself, we recommend you instal a damper to adjust the air flow and pressure
3. The dehumidifier must always be level, and be placed on solid, stable ground
4. If there is any likelihood of condensation forming on or inside this ductwork, you may need to insulate duct for regeneration air inlet
5. Distance between the air inlets and outlets must be at least 2 m
6. The duct must be fitted with a drain to prevent any condensate from reaching the regeneration air fan
7. Leave 50 cm of free space above the unit so there's enough room for installation and adjustment work

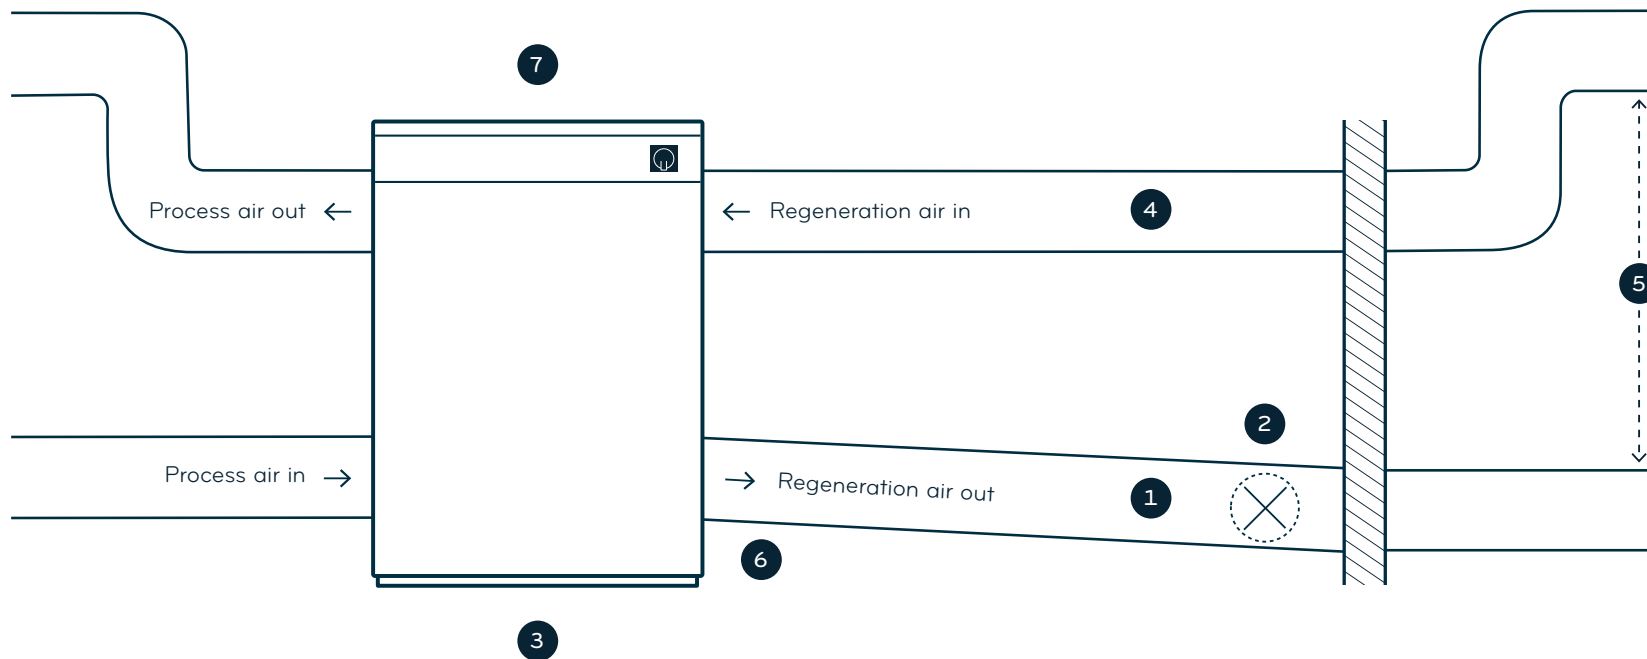

- A. You should always take measurements at the middle of the longest straight duct run (as illustrated).
- B. The area in front of the unit has to be cleared. Keep a distance to walls etc. wider than the width of the unit.

